



General Machinery Safety Instructions

Machinery House
requires you to read this entire Manual before using this machine.

- 1. Read the entire Manual before starting machinery.** Machinery may cause serious injury if not correctly used.
- 2. Always use correct hearing protection when operating machinery.** Machinery noise may cause permanent hearing damage.
- 3. Machinery must never be used when tired, or under the influence of drugs or alcohol.** When running machinery you must be alert at all times.
- 4. Wear correct Clothing.** At all times remove all loose clothing, necklaces, rings, jewelry, etc. Long hair must be contained in a hair net. Non-slip protective footwear must be worn.
- 5. Always wear correct respirators around fumes or dust when operating machinery.** Machinery fumes & dust can cause serious respiratory illness. Dust extractors must be used where applicable.
- 6. Always wear correct safety glasses.** When machining you must use the correct eye protection to prevent injuring your eyes.
- 7. Keep work clean and make sure you have good lighting.** Cluttered and dark shadows may cause accidents.
- 8. Personnel must be properly trained or well supervised when operating machinery.** Make sure you have clear and safe understanding of the machine you are operating.
- 9. Keep children and visitors away.** Make sure children and visitors are at a safe distance for you work area.
- 10. Keep your workshop childproof.** Use padlocks, Turn off master power switches and remove start switch keys.
- 11. Never leave machine unattended.** Turn power off and wait till machine has come to a complete stop before leaving the machine unattended.
- 12. Make a safe working environment.** Do not use machine in a damp, wet area, or where flammable or noxious fumes may exist.
- 13. Disconnect main power before service machine.** Make sure power switch is in the off position before re-connecting.
- 14. Use the Correct Extension Lead.** Extension leads should be avoided where possible but If required, always use an extension lead that is rated for the power requirements of your machinery. Using an incorrectly rated extension lead can lead to overheating, damage to machinery, or potential fire hazards. Ensure leads are in good condition and free of damage. Replace if faulty.
- 15. Keep machine well maintained.** Keep blades sharp and clean for best and safest performance. Follow instructions when lubricating and changing accessories.
- 16. Keep machine well guarded.** Make sure guards on machine are in place and are all working correctly.
- 17. Do not overreach.** Keep proper footing and balance at all times.
- 18. Secure workpiece.** Use clamps or a vice to hold the workpiece where practical. Keeping the workpiece secure will free up your hand to operate the machine and will protect hand from injury.
- 19. Check machine over before operating.** Check machine for damaged parts, loose bolts, Keys and wrenches left on machine and any other conditions that may effect the machines operation. Repair and replace damaged parts.
- 20. Use recommended accessories.** Refer to instruction manual or ask correct service officer when using accessories. The use of improper accessories may cause the risk of injury.
- 21. Do not force machinery.** Work at the speed and capacity at which the machine or accessory was designed.
- 22. Use correct lifting practice.** Always use the correct lifting methods when using machinery. Incorrect lifting methods can cause serious injury.
- 23. Lock mobile bases.** Make sure any mobile bases are locked before using machine.
- 24. Allergic reactions.** Certain metal shavings and cutting fluids may cause an allergic reaction in people and animals, especially when cutting as the fumes can be inhaled. Make sure you know what type of metal and cutting fluid you will be exposed to and how to avoid contamination.
- 25. Call for help.** If at any time you experience difficulties, stop the machine and call you nearest branch service department for help.



Rotisserie Safety Instructions

Machinery House
requires you to read this entire Manual before using this machine.

- 1. Application.** The Rotisserie is designed for rotating vehicle body shells for restoration work. Other various industries may use this Rotisserie.
- 2. Load Requirement.** Refer to your vehicle service manual to verify that the vehicle weight does not exceed the maximum Rotisserie load rating. Do not over load the Rotisserie capacity.
- 3. Attaching Vehicles or Loads.** Refer to your Instruction manual to verify that the vehicle weight does not exceed the maximum Rotisserie load rating of 1500kg. Total Rotisserie capacity is 1500kg (750kg each Side). Mounting points must not be any less than 400mm apart as it will put too much load in the centre cross brace and exceed the recommended capacity. Always seek professional help when attaching vehicles bodies or objects to the Cross Brace Mounts. Serious injury can occur if not installed in the correct manner. Owner takes full responsibility if attached any vehicle body or object to the Rotisserie.
- 4. Condition.** The Rotisserie must be maintained for a proper working condition. Never operate a Rotisserie that has damaged or worn parts. Scheduled routine maintenance should be performed on a scheduled basis. Check frame, welds and for cracks or damage. Replace if necessary.
- 5. Crushing Hazard.** Never place any part of your body under the Rotisserie, or under a attached load. Always mount the vehicle at the appropriate mounting points and seek professional advice to help when attaching the vehicle to the support brace of the Rotisserie. Never move the Rotisserie without all 4 lock pins in place. Otherwise serious injury can occur.
- 6. Work area hazards.** Pay attention to other persons in the area and know what is going on around the area to ensure unintended accidents.
- 7. Vehicle Size Limit.** Do not attached over sized vehicles that don't fit inside the Rotisserie. Serious injury can occur or damage to vehicle and rotisserie.
- 8. Warning Labels.** Take note of any warning labels on the Rotisserie and do not remove them.
- 9. Locking Pins.** Before using or moving the rotisserie ensure that all 4 locking pins are in place. Serious injury can occur if the rotisserie rotates when not intended.
- 10. Rotating Rotisserie.** Before Rotating the Rotisserie ensure the Slider Spacer Bars are the same distance apart & all locked in place. The Rotisserie will only rotate if both sides are parallel to each other and equal distance apart. You may damage the Rotisserie If Slider Bars are not aligned and balanced correctly. Place all Locking Pins back in once at correct angle.
- 11. Moving Vehicle.** The Rotisserie is designed for manually moving the vehicle by hand only. Only operate Rotisseries if you are strong enough to control and stop it when it is moving, call for more people to help if needed. Once in place lock all 8 wheel brakes.
- 12. Safe Level Surface.** Only use this Rotisserie on a hard level surface capable of sustaining the combined load. Avoid using the Rotisserie on inclines or ramps that will cause a loss of control.
- 13. Safe Operation.** Load must be centred in the Rotisserie when attaching, Seek professional help when installing and attaching vehicle or any loads to the Cross Brace Mounts. Before removing or installing your vehicle body, always apply the wheel brakes of the Rotisserie. Only move the Rotisserie with the 4 lock pins in place and all Slider Spacer Bars locked in place to prevent the Rotisserie from tipping, Rotating or coming apart.
- 14. Pinching.** Prevent pinching - never place hands or body parts between the moving parts of the Rotisserie while moving or rotating. Always make sure the 4 lock pins are in place at all times apart from when rotating the rotisserie.
- 15. Do not Modify the Rotisserie.** Never modify this Rotisserie from its intended use.
- 16. Storage.** Always make sure the Rotisserie is out of the way of human traffic and make sure all wheel brakes are on.
- 17. Other Hazards.** Never allow children to play on Rotisserie while in use or in storage.
- 18. Call for help.** If at any time you experience difficulties, stop and call you nearest branch service department for help.

PLANT SAFETY PROGRAM

NEW MACHINERY HAZARD IDENTIFICATION, ASSESSMENT & CONTROL

Rotisserie

Developed in Co-operation Between A.W.I.S.A and Australia Chamber of Manufactures
This program is based upon the Safe Work Australia, Code of Practice - Managing Risks of Plant in the Workplace (WHSA 2011 No10)

Item No.	Hazard Identification	Hazard Assessment	Risk Control Strategies <small>(Recommended for Purchase / Buyer / User)</small>
B	CRUSHING	HIGH	Ensure Rotisserie is on level solid ground. Seek professional help when attaching the vehicle to the mounting Brace. Ensure the vehicle is centered to the Rotisserie rings when mounting and balanced. Do not exceed maximum load capacity & minimum mounting point distance of 400mm. Wear safety boots. Always check around rotisserie before moving or rotating. Ensure all 4 Safety Lock Pins are in place at all times when using the Rotisserie. Keep body clear from under the vehicle.
D	SHEARING	MEDIUM	Keep body parts clear between moving components of the Rotisserie when rotating.
J	SLIPPING, TRIPPING, & FALLING	LOW	Avoid uneven or slippery surfaces when moving Rotisserie under load.

Plant Safety Program to be read in conjunction with manufactures instructions



www.machineryhouse.com.au



www.machineryhouse.co.nz

Authorised and signed by:
 Safety officer:
 Manager:

Revised Date: 2nd June 2025